



Commercial EV Charger OCPP Configuration Tools User Manual



T-1 Lighting, Inc.
9929 PIONEER BLVD
SANTA FE SPRINGS, CA 90670
+1 626-234-2328



Table of Contents

1 Connection Instruction	01
2 Software Instruction	04



Please scan the QR code to download and install the latest version of the EV Charger OCPP Configuration App.




Connection Instruction



Connect to the EV Charger by using bluetooth protocol through the App.

1 Start the EV Charger

2 Open the App

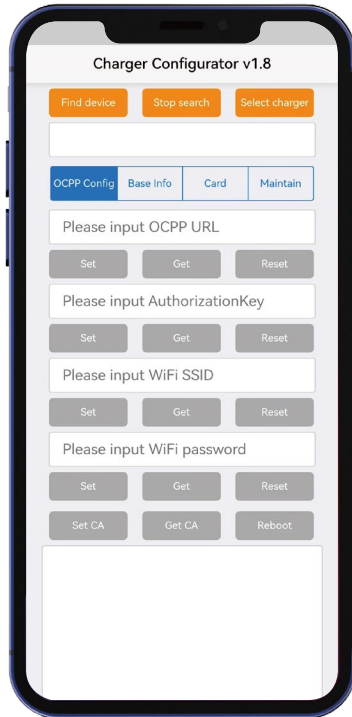

3 Search for bluetooth device (default password: Admin888)

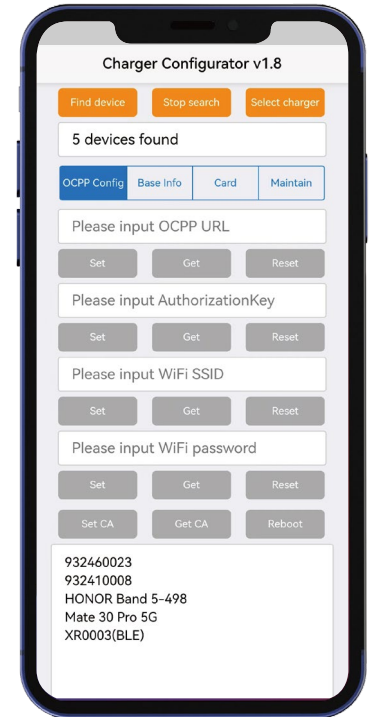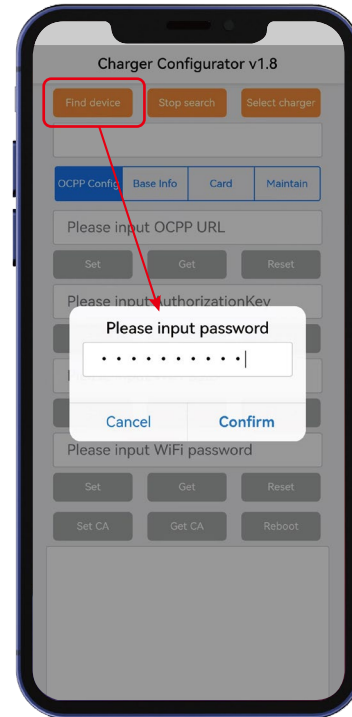




Software Instruction

Configure the OCPP server in the "OCPP Config" tab.

4 Select EV Charger, and connect the EV Charger

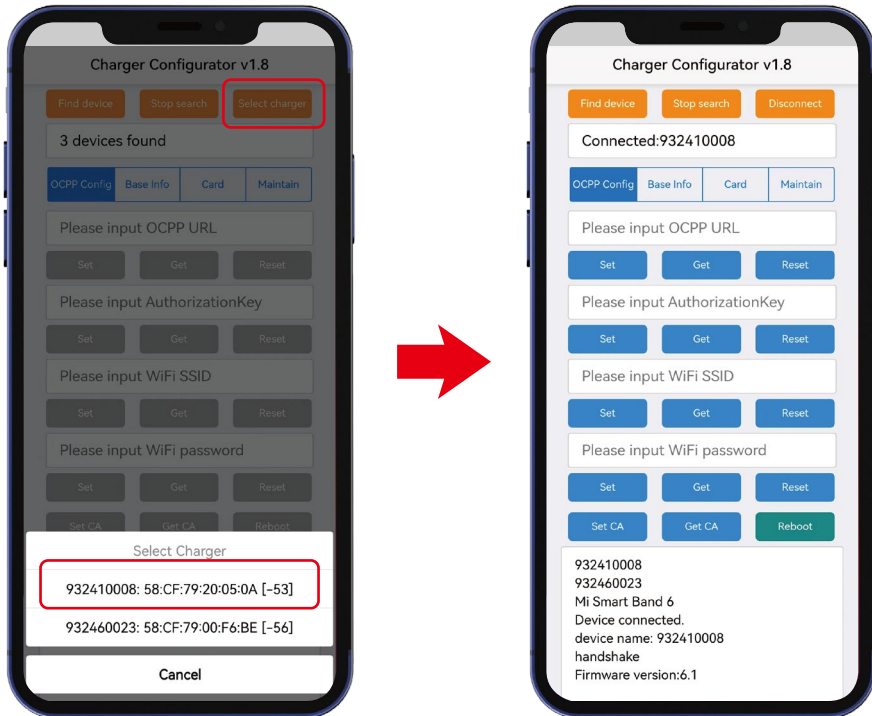

1 Enter OCPP URL (ex:wss://ocpp.io), click "Set".

2 Enter AuthorizationKey (The password is a 20-byte key), click "Set".

3 Enter WIFI SSID, click "Set". (Case sensitive for WIFI SSID)

4 Enter WIFI Password,click "Set".

5 Click "Reboot" to restart the EV Charger to take effect on the updated configuration information.

